


Product-Specific INSTALLATION & TECH SPECS



PROFILE IDENTIFICATION AND DETAILED DRAWING

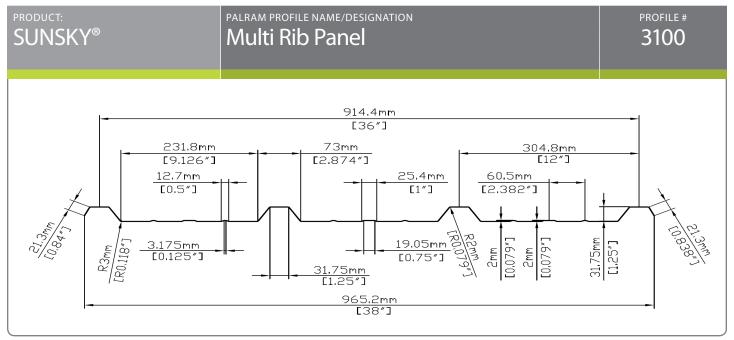

PROFILE DIMENSIONS

PROFILE		THICKNESS		LENGTH †		OVERALL WIDTH		NET COVERAGE AFTER OVERLAP		SIDE LAP
mm	inch	mm	inch	m	feet	mm	inch	mm	inch	%
304.8/31.7	12/1.25	0.8-1.5	.0306	1.5-11.8	5-39	965.2	38	914.4	36	5.3

† MAXIMUM RECOMMENDED PANEL LENGTH

m	feet	
7	24	

While it is technically possible to manufacture and ship the maximum length listed, Palram does not recommend exceeding the length shown at left in order to avoid significant issues related to thermal expansion and contraction.

MAXIMUM ROOF SPAN (INCHES)

Load (lb/ft²	Load	.03" (0.8mm) thickness		.04" (1.0mm) thickness		.05" (1.2mm) thickness		.06" (1.5mm) thickness	
	(ID/Tt²)	End Span	Mid Span						
	15	37	49	40	53	41	55	46	61
	20	33	44	35	47	38	51	41	55
	25	31	41	32	43	35	47	38	51
	30	29	38	31	41	32	43	35	47
	35	27	36	30	39	31	41	34	45
	40	27	35	28	37	30	39	32	43

NOTES ABOUT MAXIMUM ROOF SPANS

- The specified dimensions do not supersede the requirements of local construction codes.
- The given spans are according to deflections criterion of L/20, and minimum slope of 10%.
- The maximum roof spans are based on calculation model and practical testing.
- The mentioned load refers to wind and snow load only.
- For vertical application spans can be increased by 10%.

Continues on back side

PRODUCT: SUNSKY®

PALRAM PROFILE NAME (a.k.a. Designation)

Multi Rib Panel

PROFILE #

3100

FASTENER AND WASHER SPECIFICATION FOR THIS PROFILE

Self-drilling ¼" (6mm) x 1.5" (38mm) screw

Self-drilling ¼" (6mm) x 3" (75mm) screw with

¼" (6mm) x 3/4" (19mm) self-drilling ½" (6mm) x 3" (75mm) screw with

Self-drilling ¼" (6mm) x 1.5" (38mm) screw with 19 mm diameter- galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.

Self-drilling ¼" (6mm) x 3" (75mm) screw with 19 mm diameter- galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.

1/4" (6mm) x 3/4" (19mm) self-tapping screw with 19mm diameter galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.

FASTENING

- Apply sealing tape over the SUNSKY panel side-lap corrugation crests, where covered by the next panel.
- Apply sealing tape along the bottom and top end-lap (if there is one), along screw center line or two tapes on both sides of screw center line.
- Pre-drill 3/8" holes where screws are positioned.
- Fasten the screws according to the fastening illustrations below, starting from the first side-lap through, the pre-drilled holes.
- Fasten the Side Lap Stitching Screws at every 12-16 inches (Fig. 3).

- Figure 1: End Purlin fastening schedule.
- Figure 2: Intermediate Purlin fastening schedule.
- Figure 3 & 4: Side Lap Stitch Screw in between purlins so that 12-16 inch spacing can be achieved.
- Figure 5: Side Lap Fastener through corrugation crest at purlin.






DO NOT OVER-TIGHTEN!


Washers should be perpendicular to purlin, and tightened to the point where they are firmly seated, but not bulging.

FASTENER LOCATIONS FOR THIS PROFILE

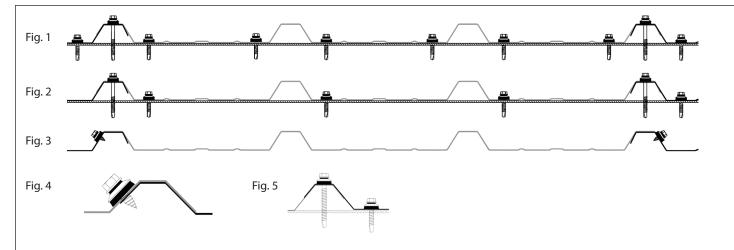

PANEL OVERLAP AND OVERHANG

- Recommended longitude overlap of 8" above purlin.
- Each panel to extend 4" over the fixings line on the purlin.
- Panels should overhang a minimum of 2 inches and maximum 6 inches beyond the row of fasteners.

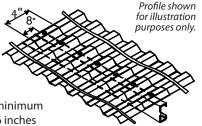

CURVED ROOF APPLICATIONS

Minimum curving radius 43 feet

